

## Appendix to Installation Instructions Model HUB-4

Communication Card for NCCNTWAN

---

This errata sheet applies to the HUB-4 Installation Instructions, P/N 315-099458.

1. **Page 3. The setting of the switches on HUB-4, Main-2 Board (Switch S-2) should read as follows:**

All switches on the HUB-4, Main-2 Board (Switch S2) must be set in the ON position. (Refer to Figure 1.)

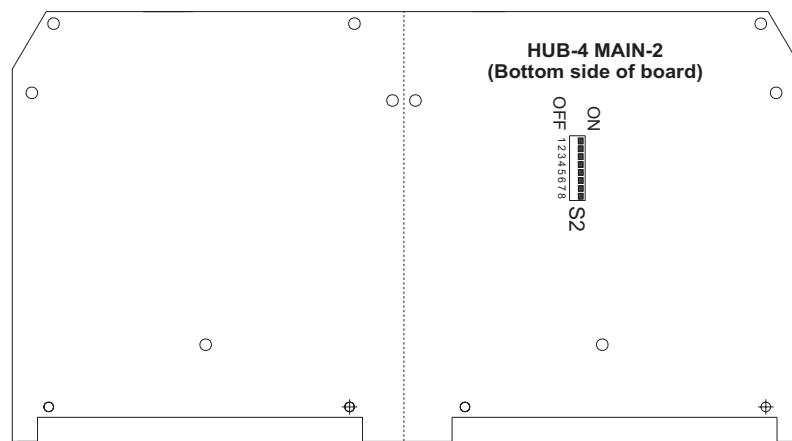


Figure 1 – Location of S2 on HUB-4, Main-2

2. **Page 6. The WARNING note should read as follows:**

Remove all system power before installation, first battery and then AC. To power up, connect the AC first, then the battery.

3. **Page 7. The Electrical Ratings Input Power should read as follows:**

24V Back Plane Current	0
Screw Terminal 24V Current	400mA
6.2 Back Plane Current	30mA
24V Standby Current	400mA