



Shunt Release / Undervoltage Release

分励脱扣器 / 欠压脱扣

Disparo de derivación / Disparador de voltaje insuficiente

Desarme paralelo / Disparo de subtensão

(Cat 140EX-HE-SN*; 140EX-HE-U*)



WARNING

警告

ADVERTENCIA

ATENÇÃO


To prevent electrical shock, disconnect from power source before installing or servicing. Install in suitable enclosure. Keep free from contaminants.

为了防止触电，在安装或维修之前必须先切断电源。安装在合适的设备箱内。防止接触污染物。

Desconéctese de la corriente eléctrica, antes de la instalación o del servicio, a fin de impedir sacudidas eléctricas. Instálelo en una caja apropiada. Manténgalo libre de contaminantes.


Para evitar choques, desconectar da corrente elétrica antes de fazer a instalação ou a manutenção. Instalar em caixa apropriada. Manter livre de contaminantes.

- (+) ~ + (-) ~

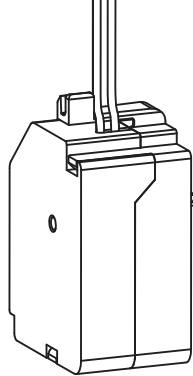


Shunt trip release

140EX-HE-SN*

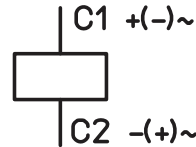

Undervoltage release

140EX-HE-U*

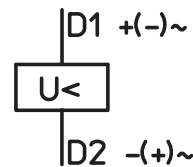

1

Mounting

安装


Montaje

Montagem


140EX-HE...

140EX-JE...


140EX-KE...

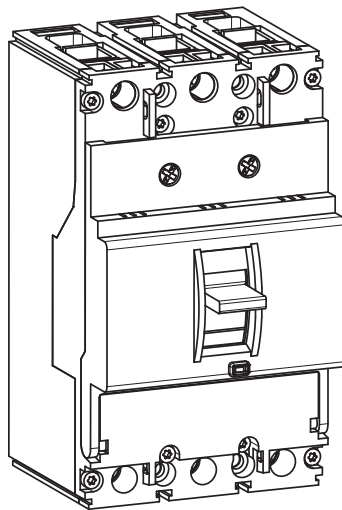


2

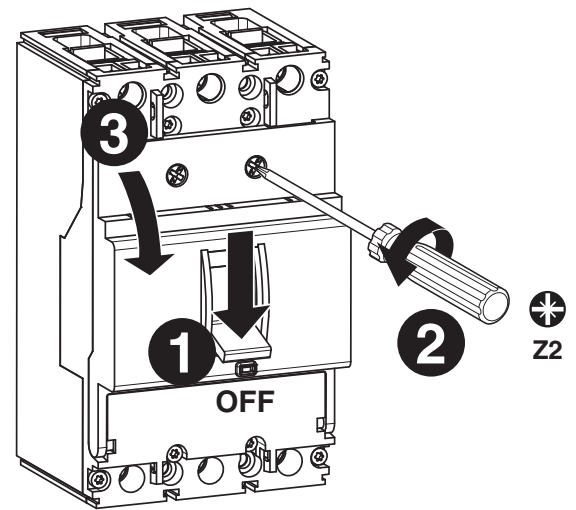


3

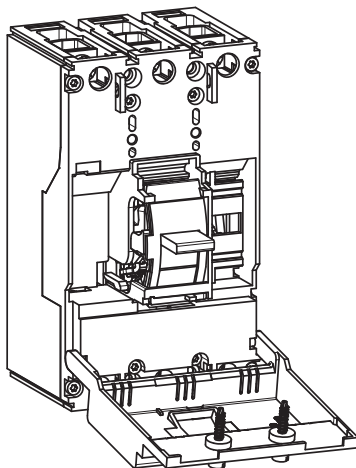


4a

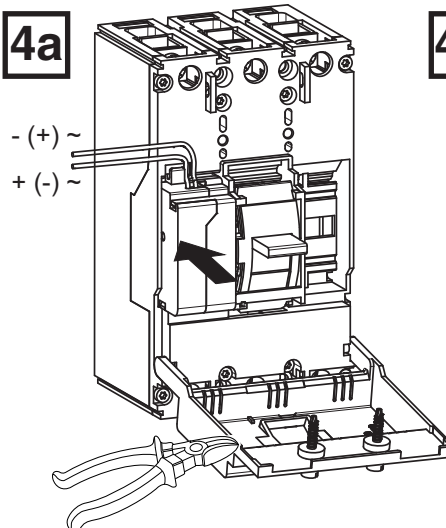


4b

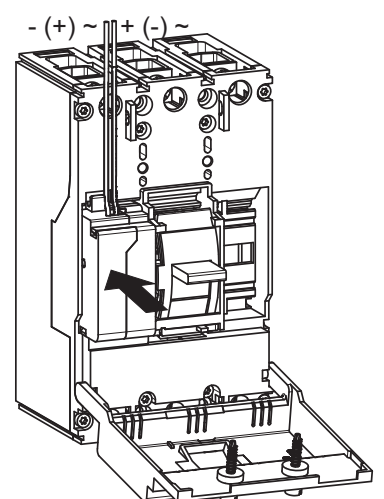


5

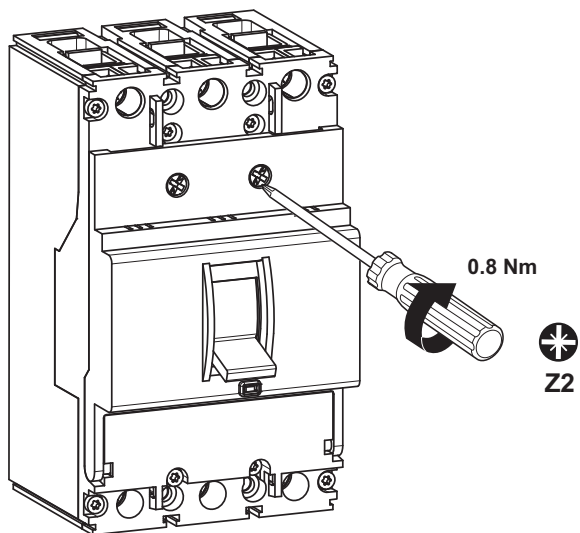

TEST 1

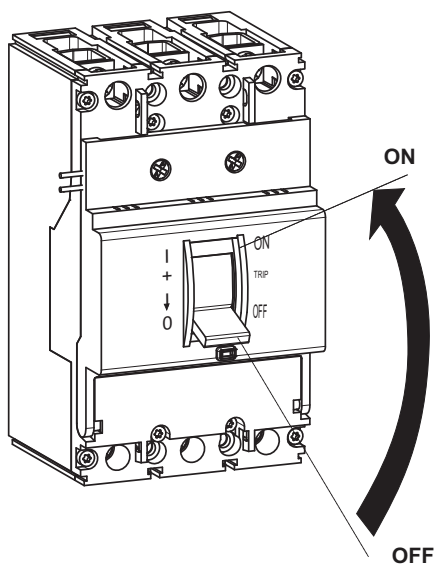

TEST 2

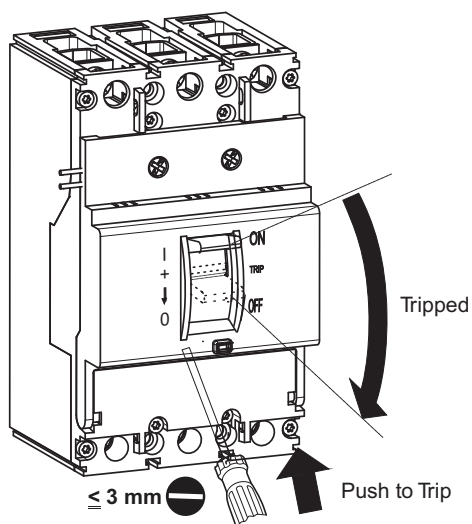

TEST 3

